 
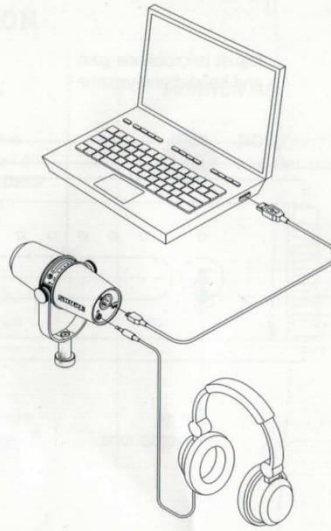 
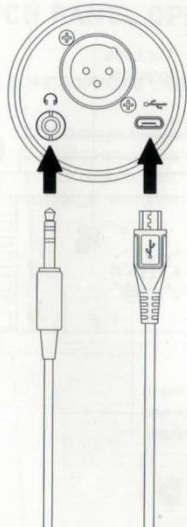 
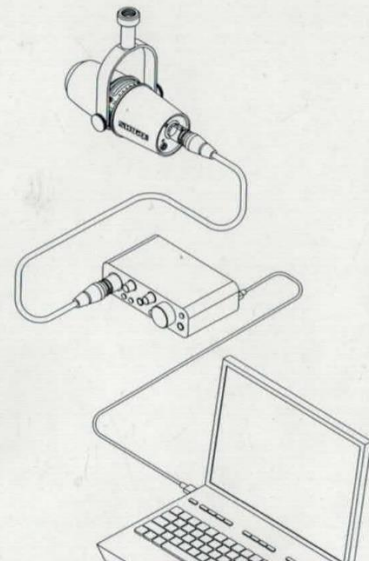 


CONNECT

VIA XLR

If using the MV7 via XLR, simply connect the microphone to an audio interface or mixer and start creating.

*Note, the touch panel on the microphone will not be activated when using the microphone via XLR

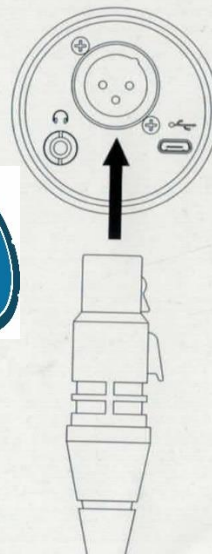

CONNECT

VIA USB

 
If using the MV7 via USB, you will need to download the ShurePlus MOTIV App for ultimate control (available at Shure.com/MOTIVdesktop)



USB

TOUCH PANEL

When using the MV7 via USB you can control the microphone using the touch panel.

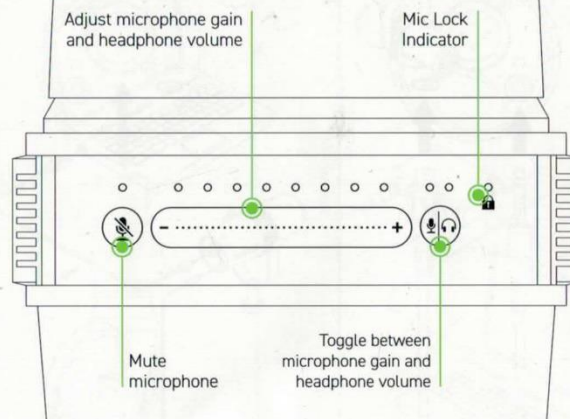


TOUCH PANEL OPERATION

TOGGLE: MICROPHONE \ HEADPHONE




TAP to toggle between Microphone Gain and Headphone Volume, then dial in your preferred settings by **SLIDING** your finger along the touch panel.

 1.



 2.

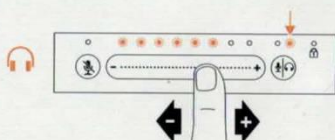


MONITOR MIX




HOLD for 2 seconds to access Monitor Mix, then dial in your preferred mix.

 1.



 2.

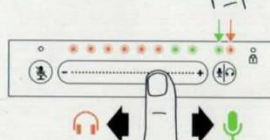

LOCK / UNLOCK TOUCH PANEL



HOLD BOTH for 2 seconds to lock/unlock touch panel

TOGGLE: MUTE / UNMUTE MICROPHONE



If the LED above the headphone icon is **FLASHING**, please see the online User Guide.



SHUREPLUS MOTIV™ APP

AT A GLANCE

Please visit Shure.com/MOTIVdesktop to download the MOTIV App for Mac or Windows. Once installed, choose from Auto Level Mode, where EQ, compression, and auto gaining are taken care of automatically, leaving you to focus on your production, or Manual Mode, where you are in control.

MANUAL MODE



AUTO LEVEL MODE



CONTROL

The most exciting and unique feature of the ShurePlus MOTIV App is Auto Level Mode. Your voice and mic position are always changing. Auto Level Mode sets your gain perfectly in real-time, so your output level stays consistent. This allows you to focus on your content, not your mic technique and gives your audience a more consistent listening experience.

MONITOR MIX Mix between hearing yourself and your system audio

MIC POSITION Select **NEAR** if you are up to 6" away from your microphone, and **FAR** for 6-18".

Set to **NEAR**, Auto Level can prevent accidental clips and handle changes in level

Set to **FAR**, Auto Level will give you more gain at a lower noise than manual, allowing you to be farther away from the microphone with better performance and a much more consistent sound.

TONE

Select **DARK** to emphasise low end for that classic broadcast sound

Select **NATURAL** to benefit from Auto Level Mode, but leaving your voice tone unaffected

Select **BRIGHT** to add clarity to your voice

MIC GAIN

Adjust your recording level

EQ

Choose from 4 EQ presets to tailor your voice

LIMITER

Apply to prevent clipping in your recordings or streams

COMPRESSOR

Keep your audio levels consistent by applying compression to suit your needs



SHURE

FOR ULTIMATE CONTROL, DOWNLOAD THE FREE
SHUREPLUS MOTIV™ DESKTOP APP FROM [SHURE.COM/MOTIVDESKTOP](https://Shure.com/MOTIVdesktop)

