

BRUKSANVISNING




Hvordan sette den i sammen?



1

2

3

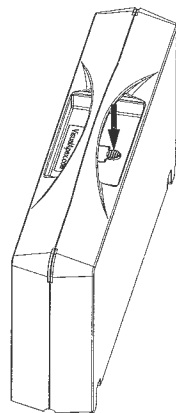


press key to unlock

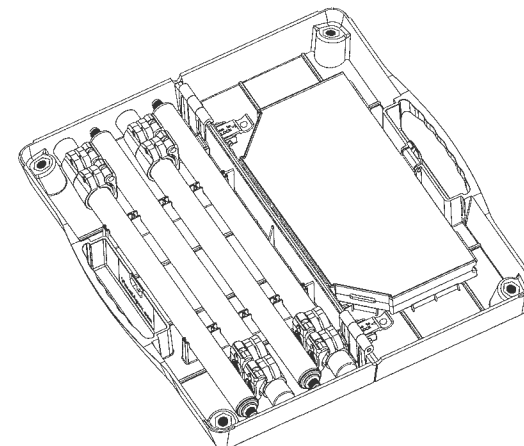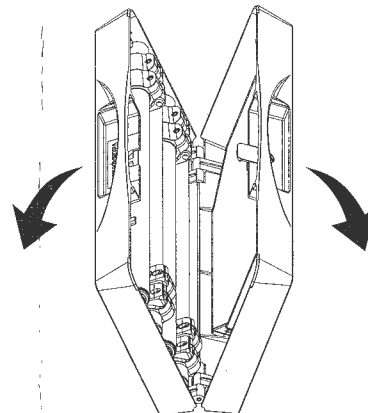


When locking the tabletop in the open position you will hear a click sound confirming engaged tabletop is ready to be set up with the legs in step 4.

4

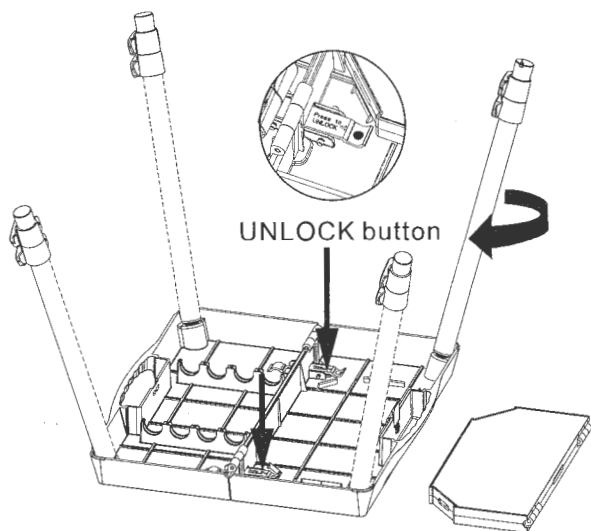


After confirming that the table is locked proceed to step 5

5

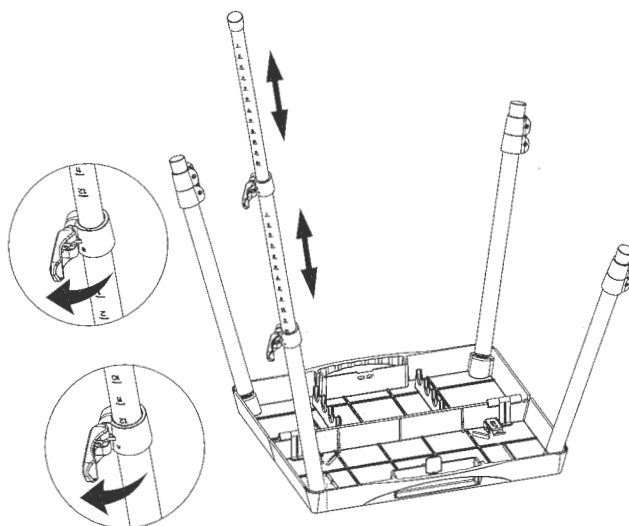


Open the handle, move the leg up and down to adjust the table height

6


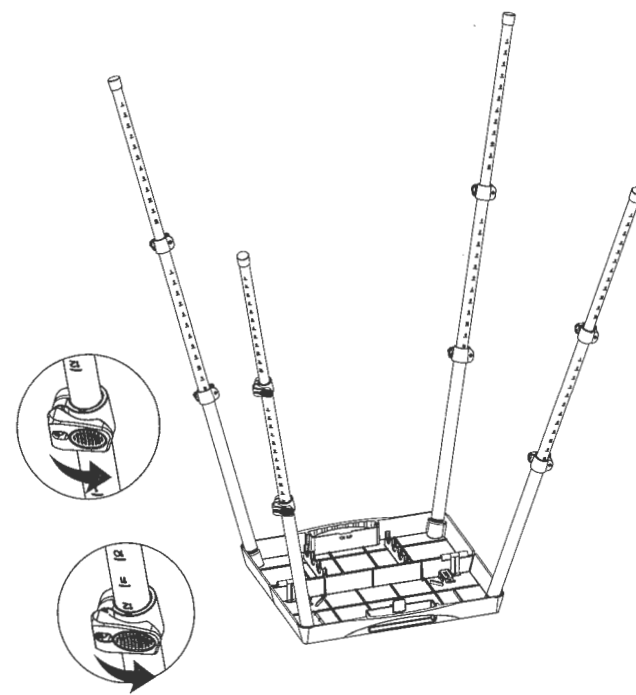


Adjust to the appropriate height then lock the handle

7

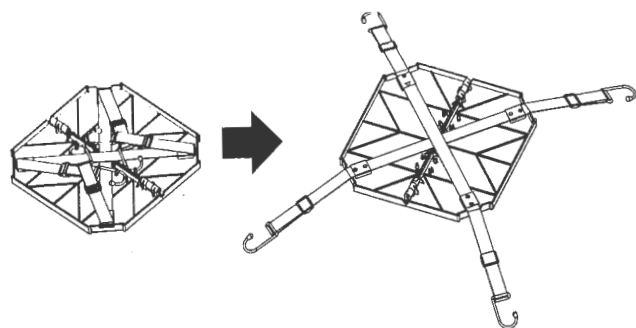

8

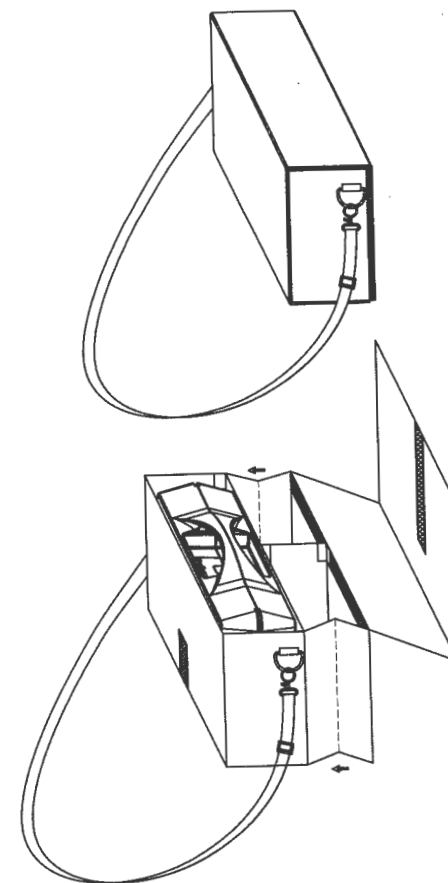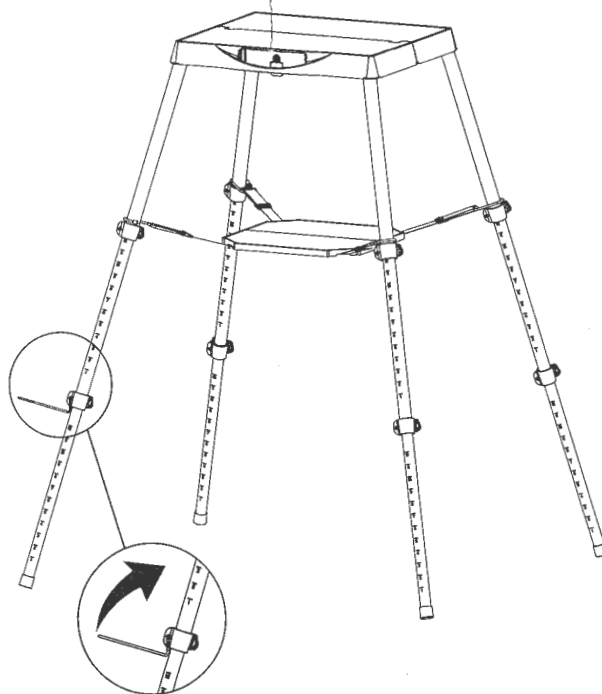


Equip the shelf


Hvordan demontere denne?

Dismantling the Projector Stand


1

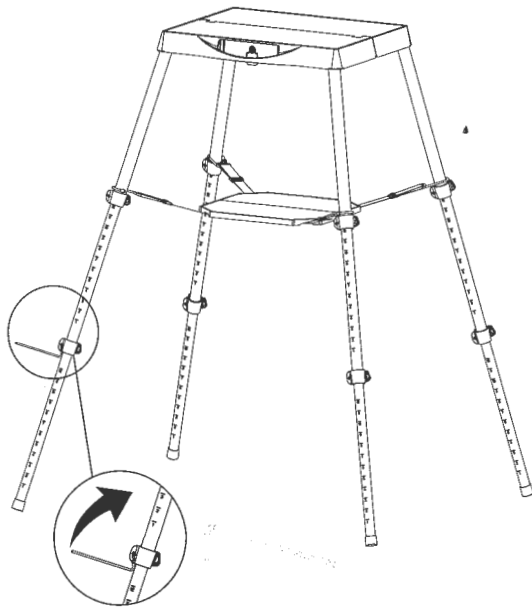

2

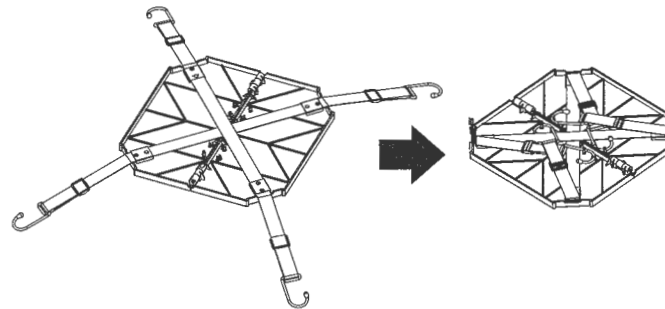


3

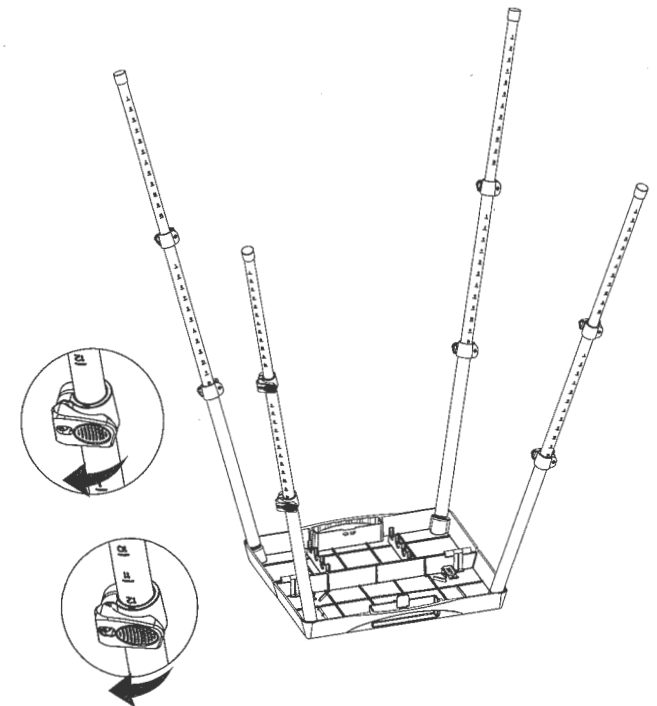


If necessary, further adjustment may be made with the hex wrench to tighten leg clamps.


4

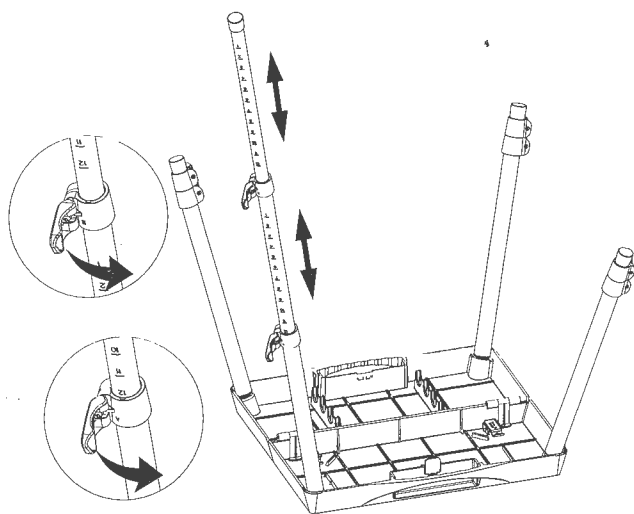

5

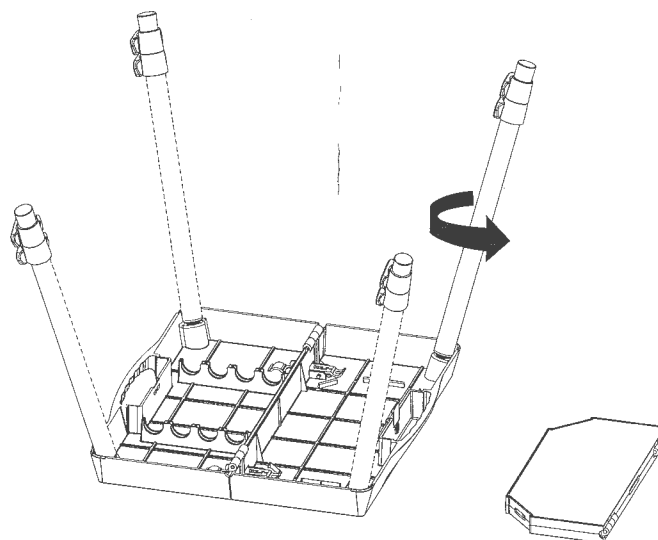

6

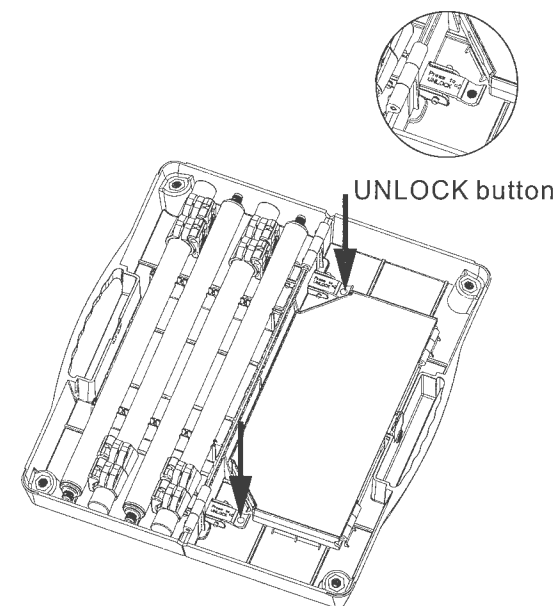

Press UNLOCK button to fold the table

Weight support capacity = 44 lb
Maximum Height = 44"
Minimum Height = 18.5"
Height range = 18.5"~44"
Tabletop dimension = 17.5"*15"

